

零件表PARTS LIST WH-0608A / WH-0707A

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
01	BA20401016260	馬達 60HZ/110V (0608A)	MOTOR 60HZ/110V (0608A)	1		10	B019528312	陶瓷柱塞+滑靴	CERAMIC PISTON + PISTON SHOE	3	
	BA20401016270	馬達 60HZ/220V (0608A)	MOTOR 60HZ/220V (0608A)			11	BJ00106051	柱塞彈簧	PISTON SPRING	3	
	BA21401016310	馬達 50HZ/230V (0707A)	MOTOR 50HZ/230V (0707A)			12A	B019501301	軸箱(含引擎培林)	HOUSING W/ BEARING	1	
01A	N/A	風蓋螺絲	SCREW	3		12	B019501300	軸箱	AXLE HOUSING	1	
01-1	N/A	電器盒	COVER	1		12-1	1019508000	引擎培林	ENGINE BEARING	3	
01-2	N/A	電器盒上蓋	COVER	1		13	B019503000	柱塞油封	PISTON OIL SEAL	3	
01-3	D020201120	啟動電容器 150uf/125V (0608A)	CONDENSOR (0608A)	1		14	BS16208030500	內六角螺絲	SCREW	2	
	N/A	啟動電容器 20uf/400V (0707A)	CONDENSOR (0707A)			14-1	BS32208300	彈簧華司	SPRING WASHER	2	
01-4	D020201121	運轉電容器 55uf/250V (0608A)	CONDENSOR (0608A)	1		15A	B011901014	加油蓋組	OIL INLET COVER ASSY	1	
	D020201005	運轉電容器 100uf/250V (0707A)	CONDENSOR (0707A)			16	BG10995103510	O形環	O-RING	1	
01-5	B130967000	過電流保護器 15A (0608A)	CIRCUIT BREAKER (0608A)	1		17A	B011801001	排油螺絲組	DRAINAGE SCREW ASSY	1	
	B130963115	過電流保護器 9A (0707A)	CIRCUIT BREAKER (0707A)			17	B011801000	排油螺絲	DRAINAGE SCREW	1	
01-6	N/A	防水套	WATERPROOF CAP	1		17-1	BG10110015	O形環	O-RING	1	
01-7	B130563021	電源開關	POWER SWITCH	1		18A	B019229003	油鏡組	OIL WINDOW ASSY	1	
01-8	B110565000	電源線固定夾	WIRE BINDER W/ NUT	1		18	B019229020	油鏡	OIL WINDOW	1	
01-9	N/A	連接線	WIRE	1		18-1	BG10158020600	O形環	O-RING	1	
01-10	N/A	電器盒固定螺絲	SCREW	4		19	B019509300	軸箱固定螺絲	SET SCREW	2	
01-11	N/A	電器盒上蓋固定螺絲	SCREW	1		20	BS32208300	彈簧華司	SPRING WASHER	2	
01-12	B019316000	出線皮	PACKING	1		21	B019509320	軸箱固定螺帽	SET NUT	2	
01-13	B100563010	馬達腳墊	MOTOR STAND CUSHION	4		22	B019504300	防水油封套	LOW PRESSURE SEAL COLLAR	3	
02	B019313300	軸承油封	BEARING OIL SEAL	1		22-1	BG10290033	O形環	O-RING	3	
03	B019527300	斜軸承	BEARING	1		23	B019506001	防水迫緊	WATERPROOF PACKING	3	
04	B019536302	偏心盤	WOBBLE PLATE	1			B019507000	防水迫緊墊片	WATERPROOF PACKING GASKET	3	
05	B019527301	止推滾珠軸承	BEARING	1		24	B019504320	迫緊中間環	U-PACKING SPACER RING	3	
06	B019517300	平面軸承片(上)	BEARING PLATE (UPPER)	1		25	B019506300	U迫緊	U-PACKING	3	
09	B019505300	止逆彈簧固定座	SPRING DISK	3			B019507300	U迫緊墊圈	U-PACKING GASKET	3	

零件表PARTS LIST WH-0608A / WH-0707A

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
26	B019507310	U迫緊底座	U-PACKING SEAT	3		53	BS21208300	六角螺帽	NUT	1	
27	B019502301	汽缸	CYLINDER	1		ACC.	B019224010	進水申目	INLET SOCKET	1	
27-1	BS16208060500	內六角螺絲	SCREW	4		ACC.	B150901110	過濾網	FILTER	1	
28A	B040063301	活門組	VALVE ASSY	6		ACC.	B150201001	迴水管組 1/2*9尺	OVERFLOW HOSE ASSY 1/2"*9FT	1	
28-1	B040363300	活門帽	VALVE CAGE	6		ACC.	BD10301000	HOSE 8.5mm*10M	SPRAY HOSE 8.5mm*10M	1	
28-2	BJ26301300	活門彈簧	VALVE SPRING	6		ACC.	A030102005	噴槍+噴嘴 N-6-2 ϕ 1.5	SPRAY GUN WITH NOZZLE N-6-2 ϕ 1.5	1	
28-3	B040163022	活門塞	VALVE PLUG	6							
28-4	B040263300	活門座	VALVE SEAT	6							
28-5	BG10124016020	O形環	O-RING	6							
29	B019534300	活門固定螺絲	VALVE BOLT	6							
29-1	BG10140018500	O形環	O-RING	6							
39	B031163041	壓力錶	PRESSURE GAUGE	1							
40	B029433010	高壓軟管90度接頭	90° CONNECTOR	1							
41	B019238000	高壓軟管出水接頭	OUTLET CONNECTOR	1							
42	B150363002	鋼絲高壓軟管 250mm	FLEXIBLE HOSE 250mm	1							
*43A	B070010018	自動洩壓總成	UNLOADING VALVE	1							
44	BS50008050	內六角油塞 PT1/4	PLUG PT1/4	2							
45	B310116010	接頭	CONNECTOR	1							
47	BS50004000	六角塞頭 PT1/8	PLUG PT1/8	1							
48	B019518000	進水接頭	INLET CONNECTOR	1							
49	B090563000	電源線	POWER CORD	1							
50	B019110000	把手片	HANDLE PLATE	1							
50-1	D011003001	握把	RUBBER HANDLE SLEEVE	1							
50-2	B019520000	把手桿	HANDLE	1							
50-3	BS11206016200	六角螺絲	SCREW	3		*43A 零件表及展開圖請參閱第4頁。			*43A parts list & diagram please refer to page 4.		
52	B100563160	腳墊	CUSHION	1					2025.04V		

零件表PARTS LIST 自動洩壓總成 B070010018 / UNLOADING VALVE

WH-0608A/WH-0707A用

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
61	B070110050	洩壓汽缸套	UNLOADING VALVE CYLINDER	1	
62	BJ50901000	洩壓輔助彈簧	AUXILIARY SPRING	1	
63A	B070610001	柱塞活門組	PISTON VALVE ASSY	1	
63	B070610000	柱塞活門體	PISTON VALVE BODY	1	
63-1	BG10150020020	O形環	O-RING	2	
63-2	BG30162020	背托環	BACK-UP RING	2	
64	B070709000	止水閥塞	STOP VALVE PLUG	1	
65	BJ30901000	球閥固定彈簧	SPRING	1	
66	B070809000	球閥固定套	BALL VALVE SEAT	1	
67	B071167050	調壓弁固定螺帽	NUT	1	
67-1	BS17106005300	無頭內六角螺絲	SCREW	2	
68	B070510000	壓力閥桿	PRESSURE VALVE ROD	1	
68-1	BG10050009020	O形環	O-RING	2	
69	B051901001	消音片	DAMPER PLATE	1	
70	B070310020	陶瓷球閥	CERAMIC BALL VALVE	1	
71/-1	B070410001	壓力閥座組	PRESSURE VALVE SEAT ASSY	1	
71	B070410000	壓力閥座	PRESSURE VALVE SEAT	1	
71-1	BG10170022020	O形環	O-RING	1	
71-2	BG20250030	方形環	SQUARE RING	1	
72	B070210050	迴水座	OVERFLOW CHAMBER	1	
72-1	BS16106019500	內六角螺絲	SCREW	4	
72-2	BS32106200	彈簧華司	SPRING WASHER	4	
73	B071310000	彈簧上座	SPRING SEAT (UPPER)	2	
74	BJ40101010	調壓彈簧	PRESSURE REGULATING SPRING	1	
75	B071710110	調壓螺帽	PRESSURE REGULATING KNOB	1	
77	B053301010	固定螺帽	SET NUT	1	

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
77-1	BG10160021020	O形環	O-RING	1	
					2025.04V

Exploded view diagram of a mechanical assembly. The diagram shows the following parts and their assembly sequence from top to bottom:

- 72**: Main pump head assembly.
- 72-1**: Bolt for the pump head.
- 67-1**: Small pin or screw.
- 67**: Flange or ring component.
- 73**: Washer or spacer.
- 74**: Spring.
- 75**: Impeller or rotor.
- 71A**: Seal or ring.
- 71-1**: Washer or spacer.
- 71-2**: Seal or ring.
- 70**: Washer or spacer.
- 68**: Bolt or screw.
- 68-1**: Washer or spacer.
- 69**: Small pin or screw.
- 63-2**: Seal or ring.
- 63-1**: Seal or ring.
- 63**: Impeller or rotor.
- 64**: Bolt or screw.
- 65**: Washer or spacer.
- 66**: Bolt or screw.
- 61**: Main pump head assembly.
- 62**: Bolt or screw.
- 77**: Nut or washer.
- 77-1**: O-ring.

B070010018
適用機型 FOR:
WH-0608A
WH-0707A